- 1. TOUCH the touch panel to activate it, if the Main Page is not visible; view the Main Page.
- 2. Press VIDEO CONFERENCE.
 - A. Video Call Controls (Figure 1-1) page appears.
- 3. Press the KEYPAD NUMBERS to enter the video number, alias, or IP address (if available) (Figure 1-1: Step 1).
 - A. Press Delete/Backspace or Clear/Delete All to correct dialing mistakes or to remove all dialed entries.
 - B. The numbers are shown on the touch panel instead of the display.
 - C. The system will not announce the video numbers as they are entered.
- 4. Press CALL (CONNECT), after all numbers have been correctly entered. (Figure 1-1: Step 2).
- 5. View the table microphone(s).
 - A. Be sure to turn on the microphone(s) on the table.
 - B. Push the microphone "Push" button, if it is off.
 - C. The LED will turn bright green.
- 6. Press UP/DOWN ARROWS to control the volume, if necessary. (Figure 1-1: Step 3).
 - A. Video Call Volume Control on the Video Call Controls page is for the video codec audio only.
 - B. Speakers Volume is for ALL room audio.
 - C. Be sure that your speakers are not muted.
- 7. Press MUTE CODEC RX, if necessary, but not recommended.
 - A. Mute button mutes the incoming audio from the video codec.
 - B. Provided per user request.
- 8. Press MUTE CODEC TX, when desired.
 - A. This button mutes the audio that is sent to the video conference unit/codec.
 - B. This button does not mute the microphones, which allows you to talk the participants when in a video conference and voice conference.
 - C. Press the "Push" button on the microphones to mute or unmute the microphones individually.
- 9. Press HANG UP, to end a call.
- 10. You should continue with the same procedure until you reach the maximum of three calls (four including the caller).

NOTE:

Home/Menu: This will allow you to see the Polycom "Add Video Call" page to a display.

Near Cam / View: Commands the video codec to show the video that is being sent to it.

Advanced Options...

Polycom Video Codec Information: This feature gives you information regarding: firmware, name, model, serial number, and additional information regarding the codec.



Figure 1-

How to place a Video Conference call using Video Call Controls

Reinitialize Codec: Restarts codec communications with the control system. (This does not reboot the codec.)

Polycom Video Call Setup: This feature gives you options for call setup, picture in picture layout, multipoint conference viewing mode, and multipoint meeting password.

Polycom Video Call Phonebook: These are user stored video call numbers to use with the Polycom unit.

Codec Remote Control Emulator: Video calls can be made using the Remote Control Emulator.

Polycom CODEC HX9000-1080: This particular model will not allow automatic switching between the near and far sites during a video conference. Use picture in picture to display the near site with the far site as the primary window.